




GBK-S and GFK-S bench and floor checkweighing scales offer bright, clear displays, heavy-duty durability, advanced checkweighing functions and a wide range of capacities and base sizes. Their 5-key operation makes general weighing tasks easy, with weight readings appearing clearly in 1.6" / 40mm-high digits. For checkweighing tasks, the backlight changes color to denote whether the sample is under (yellow), over (red) or within (green) preset limits. Weighing results can be exported via the RS-232 port to a PC or printer.

*Simple, straightforward weighing
for demanding industrial environments*

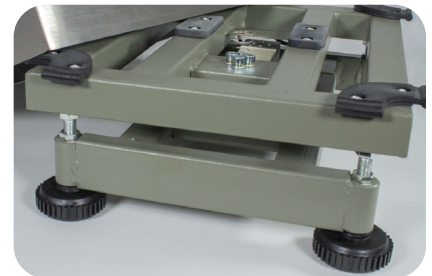

Features

- Color-changing backlight in checkweighing mode to show if under, over or within acceptable limits
- Large, 40mm-high easy to read digits on a bright background
- Simple, 5-key operation allows for easy set up and use
- Solid ABS housing (Indicator) is durable for industrial use
- Large, grade 304 stainless steel pan allows swift cleaning
- RS-232 interface provides speedy connection to computers and printers
- Optional USB interface simplifies data communication
- Selectable language for printing
- 1:1,600,000 Internal counting resolution for precise results
- Auto power-off to save energy
- Hold function freezes the displayed weight, allowing time to elapse without losing the result
- External calibration allows for verification and adjustment with weights
- Capacity tracker built into display for easily monitoring possible overloads

Applications

- Weighing
- Parts counting
- Percentage weighing
- Checkweighing
- Check counting
- Accumulation

About ADAM:

For more than 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

Product Details

| Model | GBK-S 8 | GBK-S 16 | GBK-S 32 | GBK-S 60 | GBK-S 120 | GFK-S 75H | GFK-S 75 | GFK-S 150H | GFK-S 150 | GFK-S 300 | GFK-S 600 |
|-------------------------------------|---|----------------|--------------|--------------|---------------|---|-------------|---------------|-----------------|-----------------|---|
| Capacity | 16lb / 8kg | 35lb / 16kg | 70lb / 32kg | 130lb / 60kg | 260lb / 120kg | 165lb / 75kg | | 330lb / 150kg | | 660lb / 300kg | 1320lb / 600kg |
| Readability | 0.0002lb / 0.1g | 0.001lb / 0.5g | 0.002lb / 1g | 0.005lb / 2g | 0.01lb / 5g | 0.002lb / 1g | 0.01lb / 5g | 0.005lb / 2g | 0.02lb / 0.01kg | 0.05lb / 0.02kg | 0.1lb / 0.05kg |
| Weighing Units | g, kg, lb, oz, lb:oz | | | | | | | | | | |
| Internal Counting Resolution | 1:1,600,000 | | | | | | | | | | |
| Interface | RS-232, Optional USB | | | | | | | | | | |
| Calibration | External | | | | | | | | | | |
| Display | Backlit LCD with 1.6" / 40mm-high digits | | | | | | | | | | |
| Power Supply | 12VDC 800mA adapter, Optional internal rechargeable battery | | | | | | | | | | |
| Operating Temperature | -10° to 40°C / 14° to 104°F | | | | | | | | | | |
| Housing | ABS Plastic indicator with die-cast aluminum base | | | | | | | | | | |
| Overall Dimensions (DxWxH) | 11.8" x 20.1" x 26.8" / 300 x 510 x 680mm | | | | | 15.7" x 24.4" x 33.9" / 400 x 620 x 860mm | | | | | 23.6" x 37" x 35.4" / 600 x 940 x 900mm |

Accessories

Item Number.....Description

| | |
|------------|--------------------------------|
| 3052010526 | In-use wet cover |
| 3074010266 | RS-232 cable |
| 3074010507 | RS-232 to USB adapter |
| 1120015779 | ATP2 Thermal Printer |
| 3126011263 | ATP2 paper |
| 3126011281 | ATP2 paper (x10) |
| 600002028 | AdamDU Data Collection Program |
| 700660290 | Calibration certificate |
| 1140013826 | Roller deck (15.7" x 11.8") |
| 1140013827 | Roller deck (19.7" x 15.7") |
| 1140013828 | Roller deck (31.5" x 23.6") |

Key Accessories



Roller Decks

Made from galvanized steel, roller decks are designed to easily fit on top of Adam Equipment platforms. When installed on bench and floor scale platforms, they allow parcels to be easily moved across them in two different orientations to accommodate front-to-back or side-to-side loading.



AdamDU Data Collection Program

Adam DU quickly collects information from up to eight Adam balances simultaneously. An easy-to-use interface with a main command window allows the user to view and manage data capture sessions.

Supplied by